



ERROR CODES

E129 BLADE ARM SENSOR NOT CONNECTED

- Restart the system by turning the machine off and then on again.
- If the error persists, check the cable between sensor and receiver.

E201 NO GPS FIX

- Check antenna cable.

E202 NO GPS FIX (FLOAT)

- The system is calculating GPS position. Wait until it changes.
- If the error persists, the GPS conditions might be bad.
- The Job-type “Without GPS” can be used instead.

E203 NO GPS FIX (SBAS)


- Check internet connection, mobile antenna, SIM card, and NTRIP subscription.

E204 NO HEADING

- Check cable between secondary controlbox and the GPS antenna.
- If the error persists, the GPS conditions might be bad, try moving the machine to another area.

OTHER ERRORS

- Check cable between secondary controlbox and the GPS antenna.
- If the error persists, the GPS conditions might be bad, try moving the machine to another area.

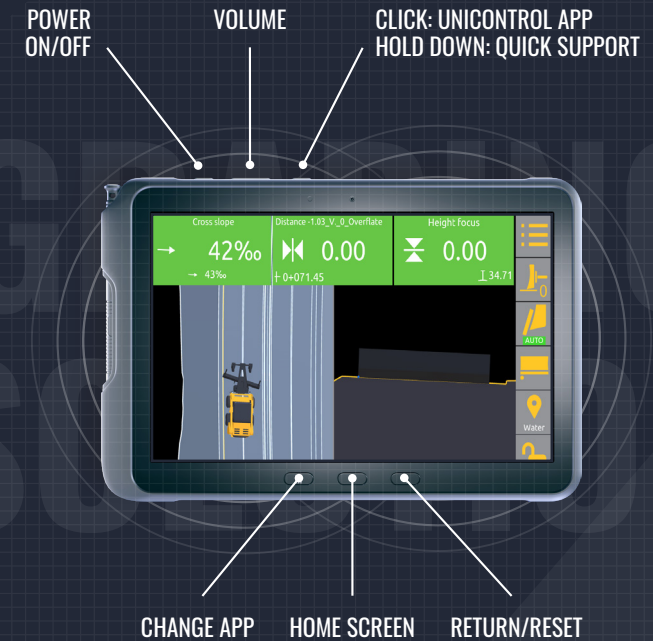

GRADING ATTACHMENT

QUICK GUIDE



NAVIGATION

PRESS

HOLD

Jobs



Project

Zero height



Height / Side offset

Change focus point



Place guide line

Place point



Pointcode

Lock to point / Line



Delete point / Line



Change view



Zoom



3D rotate




Move




Choose

JOB TYPES

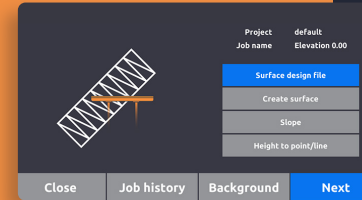


LOAD DESIGN

Height to surface, using design files.

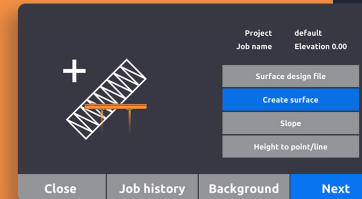


FLAT SURFACE

Set height for the entire job.

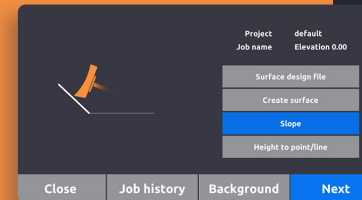

SLOPE

2 points. Point & promise. Slope to line.

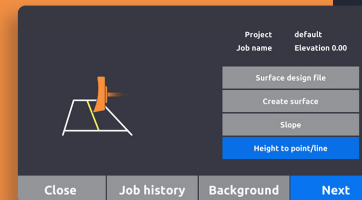

HEIGHT TO LINE

Height to 3D line using design file, guide line, or logged point.