




GE  **MAX**

Import Codelist


Import XML

- Paste XML file to Internal Storage>X-Pad>Data>Codes

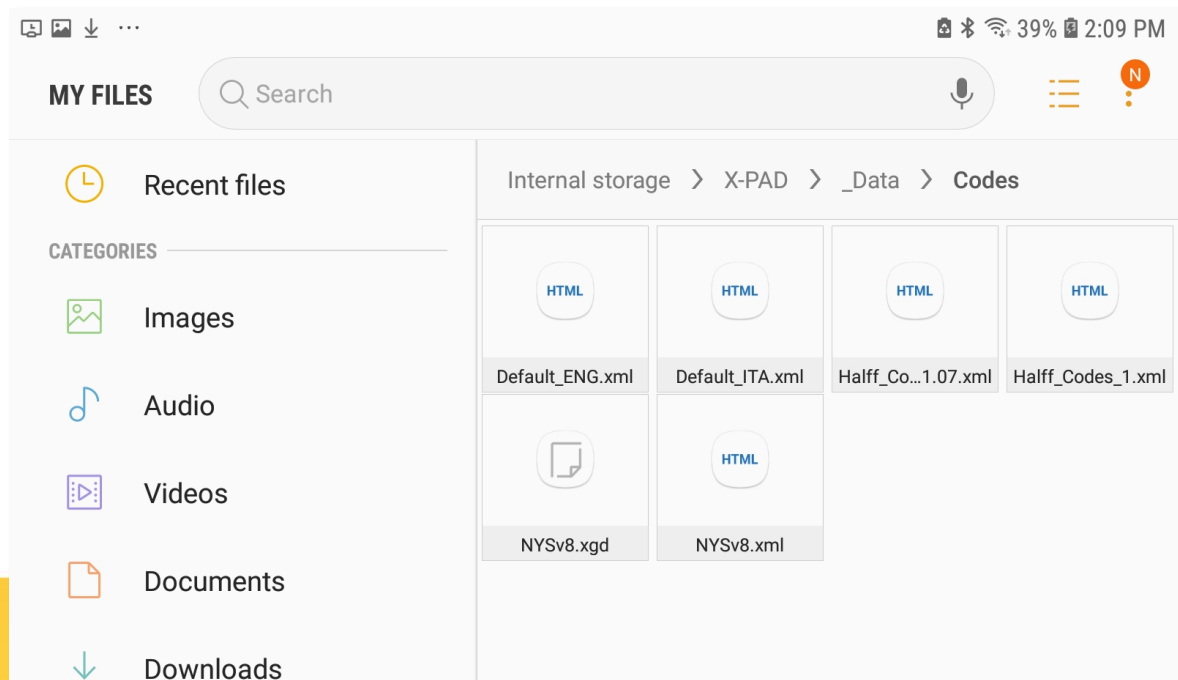


Import XML

- When creating new job select side menu option on Codes Library

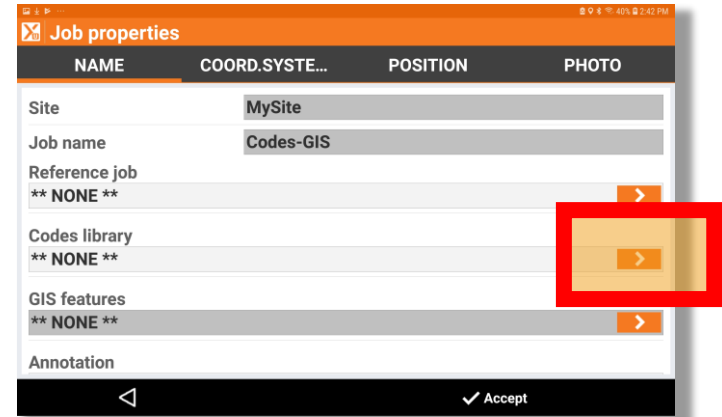


- Select your codeslist


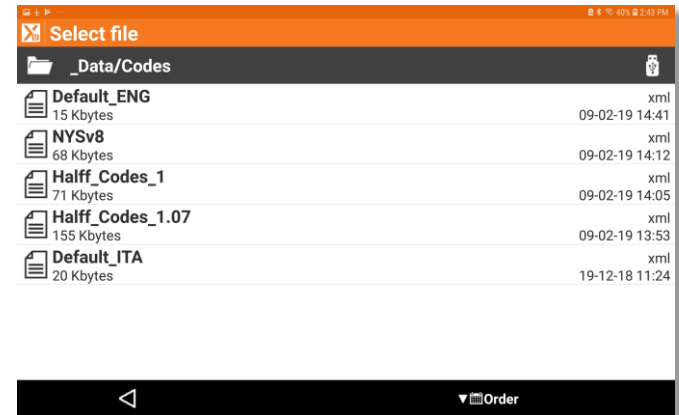


Import XML

- After completing job setup select Points/Measurements/Codes

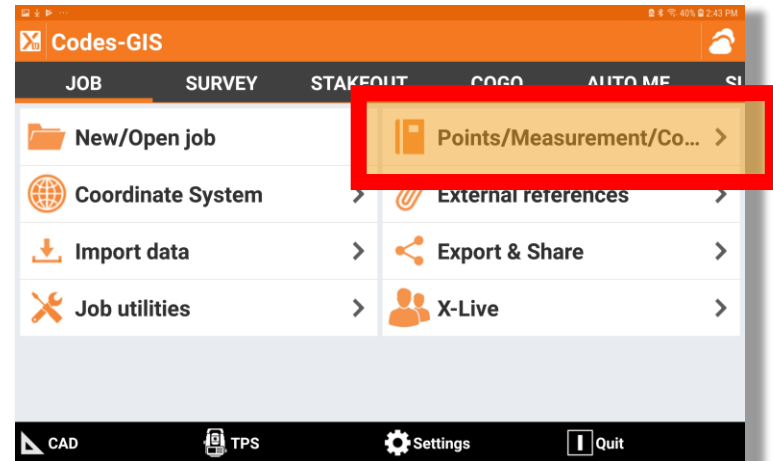

- Select the Codes menu and see all imported codes.

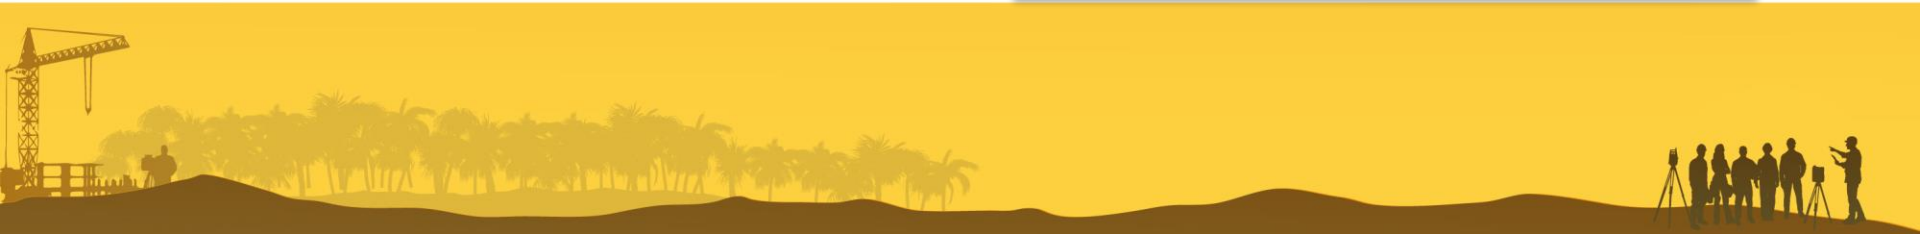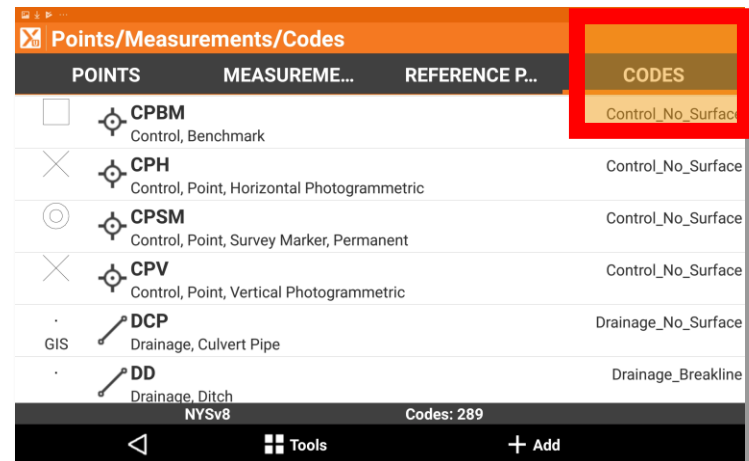

Import Codelist

Comments and suggestions to

academy@geomax-positioning.com

