

Setting out a line in FieldGenius

The image shows two screenshots of the FieldGenius software interface. The top screenshot displays the 'Line Staking' configuration window. The 'Point On Line Staking' tab is active, showing the following settings:

- Station: 0+000.000
- Interval: 0.000m
- Stake: 0+000.000 (with 'Prev' and 'Next' buttons)
- Offset Interval: 0.000m
- Offset Stake: 0.000m (with 'Left' and 'Right' buttons)

The 'Stake Point' button at the bottom is circled in red. The background map shows a line on a DXF layer named 'XF_-_LANDTAKE' with a 150m scale bar.

The bottom screenshot shows a detailed view of a stake point. The 'Stn' field is highlighted with a red box and contains the value '0+5.079'. The 'Offset' field contains 'L 0.475m' and the 'On Grade' field contains '0.000m'. The 'Staking Method' dropdown menu is also highlighted with a red box and set to 'Stationing - Absolute'. The map shows a yellow stake point on a line with a 20m scale bar. The status bar at the bottom indicates '0+000.000 C 0.000m' and 'RTK Fixed'.