
# X-PAD Ultimate Understanding DXF export

| 🔀 Export DXF      |                                  |   |
|-------------------|----------------------------------|---|
| Export parameters |                                  |   |
| Version           | AutoCAD 2018                     | ~ |
| Survey drawing    |                                  | 0 |
| Drawing           |                                  |   |
| Export 3D         |                                  |   |
| Export layers off |                                  | 0 |
| Points            |                                  |   |
| Export points     | Block with attributes and symbol | ~ |
| $\triangleleft$   | Accept                           |   |


 DXF export can be fully customized using different options

- **VERSION**: to select a compatibility version for opening with AutoCAD
- **SURVEY DRAWING**: to export the drawing elements that was measured during the survey

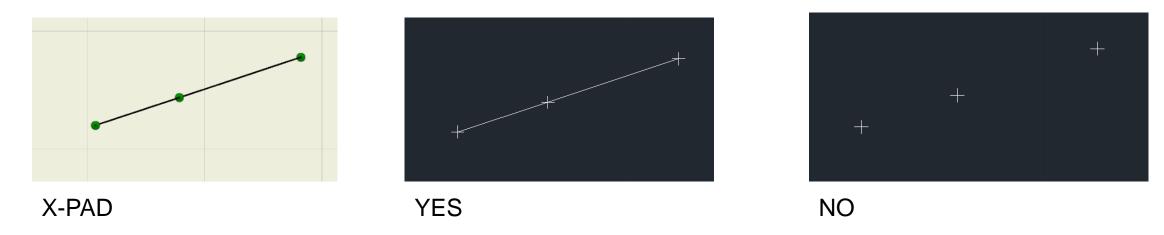




• **DRAWING**: to export CAD drawing elements that was imported or created in CAD

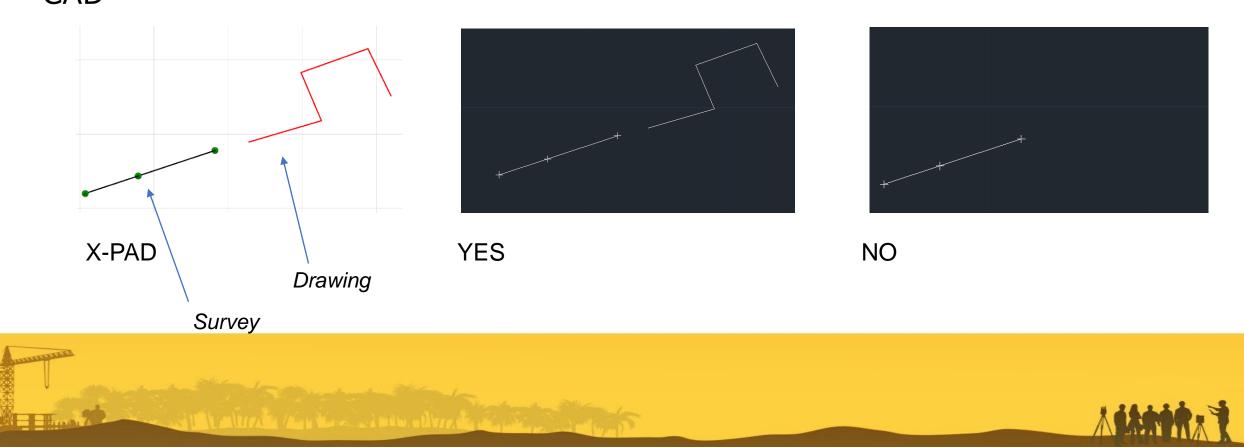

- **EXPORT 3D**: to export points with measured elevation or zero elevation (2D)
- **EXPORT LAYER OFF**: to export the layers deactivated within XPAD.

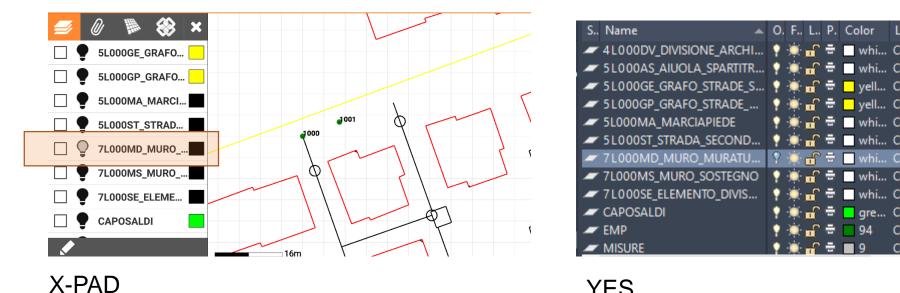

| S., Name 🔺              | O. F., L., P. Color |
|-------------------------|---------------------|
| 4L000CT_DESCR2          | 📍 🔆 🔐 🖶 🔲 whi       |
| 4L000DV_DIVISIONE_ARCHI | 📍 🔆 🔐 🖶 🔲 whi       |
| 5L000AS_AIUOLA_SPARTITR | 📍 🔆 🔐 🖶 🔲 whi       |
| 5L000GE_GRAFO_STRADE_S  | 👎 🔆 🔐 🖶 🗖 yell      |
| 5L000GP_GRAFO_STRADE    | 🕴 🔆 🔐 🖶 🗖 yell      |
| 5L000MA_MARCIAPIEDE     | 📍 🔆 🔐 🖶 🔲 whi       |
| 5L000ST_STRADA_SECOND   | 📍 🔆 🔐 🖶 🔳 whi       |
| 7L000MS_MURO_SOSTEGNO   | 📍 🔆 🔐 🖶 🔲 whi       |
| 7L000SE_ELEMENTO_DIVIS  | 📍 🔆 🔐 🖶 🔲 whi       |
| 🛩 CAPOSALDI             | 👎 🔆 🔐 🖶 🗖 gre       |
| 🛩 EMP                   | 📍 🔆 🔐 🖶 🔲 94        |
|                         | 🔹 🍯 🚅 🗧 🔍           |

YES



A 0. F., L., P. Color


📍 🔍 🔐 🖶 🗖 whi...

vell... (

whi... C


whi... C

#### • **EXPORT POINTS**: how topographic points are exported

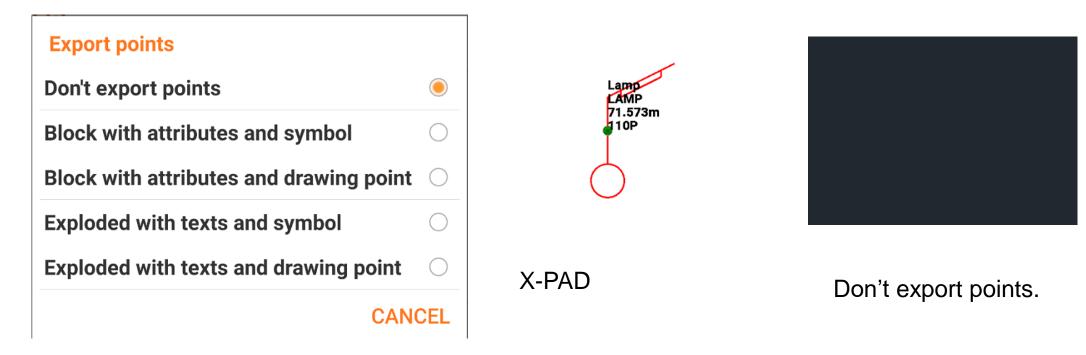



• **EXPORT POINTS**: how topographic points are exported

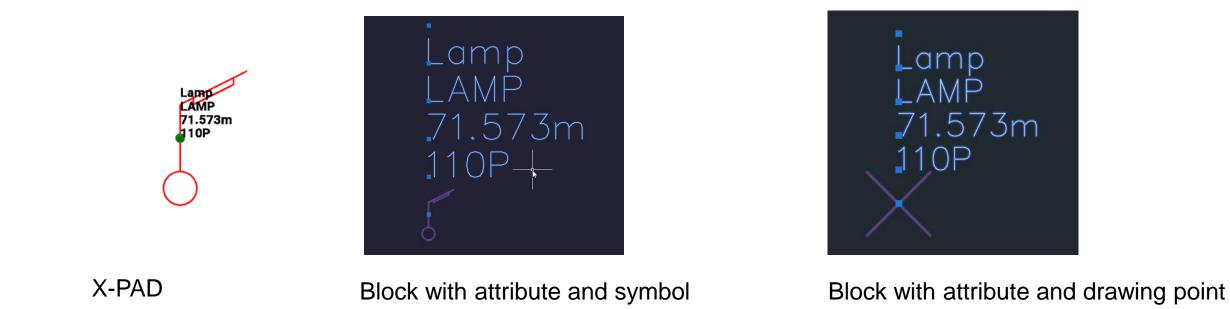




#### • **EXPORT POINTS**: how topographic points are exported



X-PAD

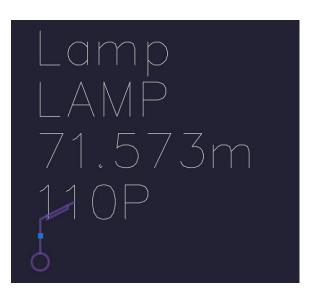

Exploded with texts and symbol



Exploded with texts and drawing point



#### • LABEL SIZE: Size of labels






• **LABEL ON LAYER OF POINT**: To export labels on same layer of the point, or on different layers







• **EXPORT SKETCHES**: Activate the export of images associated with points. In

CAD images are linked with an hyperlink

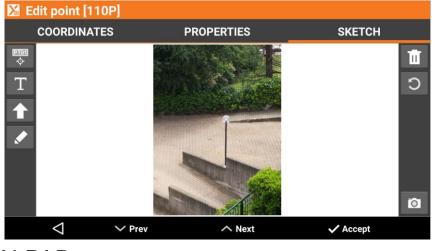



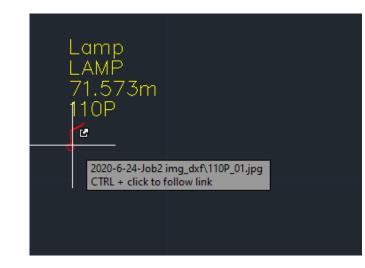

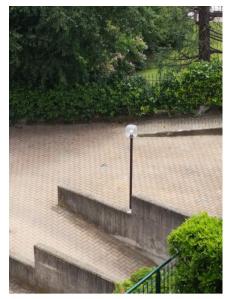

| N 39°56'34.5793" |
|------------------|
| W 3°41'35.6125"  |
| H: 71.573m       |
|                  |



• **LABELS TO EXPORT**: To select which labels to export related to topo points

| Labels to export  |  |  |
|-------------------|--|--|
| Point Name        |  |  |
| Point Elevation   |  |  |
| Point Code        |  |  |
| Point Description |  |  |

Lamp LAMP 71.573m 110P

X-PAD



• The file can be directly saved in tablet internal memory, saved on Cloud or

shared using Android services and apps

